

- **How to Enable ModBus Support for ADAM-4XXX**

- 1) Turn off the module
- 2) Connect INIT and GND with each other
- 3) Turn on the module
- 4) Run the Adam-4000 Utility (V.2.0 or higher).
- 5) Select the serial port and search module.
- 6) Change the protocol (which is placed within "General Settings") to Modbus
- 7) Turn off the module
- 8) Remove the short circuit in between INIT and GND.

